

ICON I, II, III INSTRUCTIONAL LIST:


- KEEP THE TOP CAP OF LIGHTER CLOSED WHEN NOT IN USE AT ALL TIMES.
- WHEN THE TOP CAP IS OPEN, THE 'HISSING' SOUND SIGNALS THAT GAS IS ESCAPING AND READY FOR IGNITION.
- CONSTANTLY OPENING AND CLOSING CAP IS NOT RECOMMENDED FOR LONG-TERM USE OF ICON LIGHTERS.
- THERE IS A SLIGHT DELAY IN IGNITION WHEN OPENING LIGHTER TO PRESS-IGNITION FLAME APPEARANCE FOR SAFETY REASONS.
- ICON LIGHTERS WILL NOT IGNITE IF FINGER IS PLACED ON TOUCHSCREEN SENSOR BEFORE OPENING CAP.
- SHUTTING THE TOP CAP IS MANDATORY IN TURNING OFF THE LIGHTER.
- KEEPING TOUCHSCREEN DISPLAY CLEAN OF FINGER OIL BUILDUP IS RECOMMENDED FOR LIGHTER LONGEVITY.
- DIGITAL IGNITION BUTTON IS LOCATED AT CENTER OF DISPLAY.



ICON I



ICON II

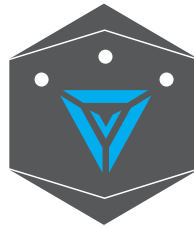

ICON III

- ICON I: MIDDLE OF THREE CIRCLE SURROUNDED BY 3 ARROWS.
- ICON II: BOTTOM PORTION OF VECTOR FLAME SYMBOL (LITTLE FLAME DISPLAY LOCATED ABOVE THE V).
- ICON III: CENTER OF TRIANGLE DISPLAY WITH VECTOR 'V' INSIDE.
- BATTERY LIFE IS INDICATED ON BLUE DOTS ON THE SCREEN.

- **ICON I & II:** 4 DOTS = 100%-75% 3 DOTS = 75%-50% 2 DOTS = 50%-25% 1 DOT = 25%-0%



- **ICON III:** 3 DOTS = 100%-75% 2 DOTS = 75%-45% - 1 DOT = 45%-0%



- HOW TO TURN ON/IGNITE/TURN OFF VECTOR ICON LIGHTERS:

1. OPEN TOP CAP OF LIGHTER
2. WAIT TO HEAR 'HISSING SOUND' AND FOR DIGITAL DISPLAY TO SHOW
3. PRESS THE DIGITAL IGNITION BUTTON LOCATED AT CENTER OF DISPLAY
4. FLAME WILL IGNITE
5. CAREFULLY CLOSE TOP CAP OF LIGHTER, SIGNALLING THE LIGHTER IS OFF (DISPLAY SHOULD TURN OFF AS WELL)