

NO PROOF WARRANTY

How to Receive Service As Consumer

- 1. No proof of purchase is required.
- 2. Clearly print name, address, telephone number and email for us to send serviced lighters back to the correct person and address.
- 3. Enclose lighter(s) in a properly padded envelope or ask a Vector retail dealer for a service envelope.
- 4. Send lighter(s), and return information all in one padded envelope to:

KGM Industries Co., Inc., c/o Service Dept. 6016 Triangle Dr., Commerce, CA 90040, USA

- 5. Insure package with carrier for possible loss during transit. KGM will not be liable for any lighters lost in transit.
- 6. Warranty service is free of charge, but there is a fee associated with return shipping. Visit the link below to find out the specific fees associated with your lighter or torch.

www.vectorkgm.com/official/vector-no-proof-warranty/

Vector lighters have passed all of KGM's demanding tests and inspection standards set by KGM Quality Control. Vector KGM warranty covers mechanical parts only under normal use and excludes damages resulting from the misuse, tampering and abuse of lighters. This warranty does not apply to the outer casing and finish. To obtain service under this warranty, return your lighter with the following information to the address below; name, return address, phone number, and email at which you can be reached. No proof of purchase is required except for discontinued models(some older lighter models may not be covered under warranty). Vector-KGM will continue to service your lighter as long as the parts are available.

KGM OFFERS THIS WARRANTY IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY WARRANTY IMPLIED BY LAW, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS, IS IN EFFECT ONLY FOR THE DURATION OF THE EXPRESS WARRANTY SET FORTH IN THE FIRST PARAGRAPH ABOVE. KGM WILL NOT BE LIABLE FOR ANY CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF ITS LIGHTERS.

WARNING:

Lighter contains pressurized butane gas. Butane gas is extremely flammable. Do not refill near fire, flame or other combustibles. Do not puncture, incinerate, or expose to temperatures of above 120°F (49°C). Keep away from prolonged sunlight. Point away from face when lighting. Make sure lighter flame is visibly extinguished after each use.

KEEP OUT OF REACH OF CHILDREN. © 2022 KGM Industries Co., Inc. All rights reserved







Ignition Sensor Button Operated by USB Charge. No Batteries Needed. USB Cable Include

Premium Refined Butane Gas Refills





65%-30%



30%-0%





nition Sensor Button Operated by USB Charge

Cigar punch

No Ratteries Needed

 
USB Cable Included

KEEPING LIGHTERS TROUBLE FREE 1. Keep lighters clean by avoiding falling ash when lighting cigars and/or

cigarettes. Dust and lint can also clog the lighter's burners. We recommend using a Vector leather lighter pouch to keep your lighter dust and lint free. 2. Over 90% of returned lighters can be serviced simply by blowing off excessive dirt and dust inside a lighter using compressed air. Compressed air can be easily purchased from a local hardware or office supply store. 3. Jet Torches, Jet Turbo Flameless, and Electronic Piezo are not ordinary fluid flint lighters. They all have a sensitive ignition mechanism that requires delicate handling of the ignition switch. Do not rapidly flick or press ignition switch like a fluid flint lighter. There are two different types of ignition switches; a push-down and slide-down ignition switch. Ignition should be done slowly and gently for both types of switches. The lighter ignition system has a split-second delayed reaction time. Fast ignition usually results in misfiring, whereas a slow and gentle ignition ensures ignition every time. 4. When flame gets weak and low, it usually means it's time to refill. Constant ignition and adjustment of the flame height when flame is weak can seriously damage lighters. Use Vector premium refined butane gas to refill the lighter. Refilling instructions are as follows:

a. Do not refill near open flame.

b. Bleed any air from fuel tank by pressing down on the refill valve located on thebottom of the lighter, until hissing sound stops. See the diagrams below:



- c. Hold lighter upside down and insert butane gas nozzle into the refill valve. Hold butane gas can down for about 15 seconds. Escaping gas during refiling indicates fuel tank is full with butane.
- d. Do not ignite right after refilling. Wait about 5 minutes to let the lighter reach room temperature.
- e. Set the flame height adjuster to desired position.
- 5. Simply keeping a lighter free of dirt and dust and refilling on a regularly basis will lengthen the lifespan of your lighter. For other problems, refer to the do-it-yourself maintenance guide below.



Dimensions: W 1.37" x L 0.61" x H 3.07"

- 1. Flip open top lid to activate sensor ignition. 2. Press and hold down on the ignition sensor
- button to ignite electronic arc flame. 3. Release finger off the ignition sensor button and
- close top lid to shut off lighter. 4. Charge lighter via USB when battery indicator









100%-75% 75%-50% 25%-0% 50%-25%



Ignition Sensor Button Operated by USB Charge. No Batteries Needed. USB Cable Included.

VECTOR



Ignition Sensor Button Operated by USB Charge. No Batteries Needed, USB Cable Included,