



## WARCRAFT / ROBUSTO / SUMMIT Flint Replacement Instruction



Flint Replacement Instructions

1. Holding both sides of the flint wheel, pull up to detach. Close lighter lid.
2. Carefully unscrew the bottom of the flint chamber. Use caution as spring tension may eject the pin from the flint chamber unexpectedly.
3. Remove worn flint and replace with new Vector flint.
4. Reinsert spring and screw pin back into flint chamber, then reinsert flint wheel back into lighter.